



HC100 Wristband Printer - Spare Parts List

Master Assembly Drawing

All information provided in **Table 1** corresponds to the numbers shown in **Figure 1**. For example, arrow 10 in the drawing is identifying the outer cover of the unit. According to Table 1, Item 10 is part 61343M - Outer Enclosure and Trim.

Master Assembly Kits

Table 1		
Item	Kit Part Number	Assembly Name
1	61340M	Upper Print Mechanism Cover
2	61330M	Print Head
3	61331M	Platen Roller
4	61341M	Print Mechanism Chassis
5	61342M	Main Frame
6	61338M	ZebraNet 10/100 Internal Print Server
7	61337M	Wireless Plus Internal Print Server
8	61335M	Main Logic Board, 8 MB
8	61336M	Main Logic Board, 64 MB
9	61339M	Smart Card Reader
10	61343M	Outer Enclosure and Trim
NOT SHOWN	61332M	Cleaning Card
NOT SHOWN	P1007957	Packing Detail Kit
NOT SHOWN	61345M	Power Supply w/o Cord
NOT SHOWN	61333M	Power Supply with US Cord
NOT SHOWN	61334M	Power Supply with UK & EUR Cords
NOT SHOWN	61344M	Power Supply with Australia Cord
NOT SHOWN	61346M	Power Supply with Taiwan Cord
NOT SHOWN	61347M	Power Supply with Japan Cord
NOT SHOWN	61348M	Power Supply with China Cord

- **Important** – The printer base is not included in any kit, therefore it appears in gray Figure 1

Zebra Technologies Corporation

333 Corporate Woods Parkway » Vernon Hills, IL 60061-3109 USA T+1 847 634 6700 F+1 847 913 8766 www.zebra.com





HC100 Wristband Printer - Spare Parts List

Figure 1 • Master Assembly Drawing

